



1995 → 2004

OUTBOARD LITERATURE
SERVICE MANUAL COLLECTION



YAMAHA



LIT-CDSRV-OB-10

YEAR	MODEL	SERVICE MANUAL	SUPPLEMENT	SUPPLEMENT 2
1995	115EJRT	LIT-18616-01-13	LIT-18619-00-97	
1995	115TLRT	LIT-18616-01-13		
1995	115TXRT	LIT-18616-01-13		
1995	130TLRT	LIT-18616-01-13		
1995	130TXRT	LIT-18616-01-13		
1995	150TLRT	LIT-18616-01-13		
1995	150TXRT	LIT-18616-01-13		
1995	15ELHT	LIT-18616-00-99		
1995	15ESHT	LIT-18616-00-99		
1995	15MLHT	LIT-18616-00-99		
1995	15MSHT	LIT-18616-00-99		
1995	175TLRT	LIT-18616-01-13		
1995	175TXRT	LIT-18616-01-13		
1995	200TJRT	LIT-18616-01-13		
1995	200TLRT	LIT-18616-01-13		
1995	200TXRT	LIT-18616-01-13		
1995	225TLRT	LIT-18616-01-13		
1995	225TURT	LIT-18616-01-14		
1995	225TXRT	LIT-18616-01-14		
1995	250TURT	LIT-18616-01-14		
1995	250TXRT	LIT-18616-01-14		
1995	25ELHT	LIT-18616-01-15		
1995	25ELRT	LIT-18616-01-15		
1995	25ESHT	LIT-18616-01-15		
1995	25MLHT	LIT-18616-01-15		
1995	25MSHT	LIT-18616-01-15		
1995	2MSHT	LIT-18616-01-16		
1995	3MLHT	LIT-18616-01-12		
1995	3MSHT	LIT-18616-01-12		
1995	40EJRT	LIT-18616-01-19	LIT-18619-00-97	
1995	40ELRT	LIT-18616-01-19		
1995	40ESRT	LIT-18616-01-19		
1995	40MJHT	LIT-18616-01-19		
1995	40MLHT	LIT-18616-01-19		
1995	40MSHT	LIT-18616-01-19		
1995	40TLRT	LIT-18616-01-19		
1995	4MLHT	LIT-18616-01-20		
1995	4MSHT	LIT-18616-01-20	LIT-18619-00-97	
1995	50EJRT	LIT-18616-01-19		
1995	50ELRT	LIT-18616-01-19		
1995	50TLHT	LIT-18616-01-19		
1995	5MLHT	LIT-18616-01-20		
1995	5MSHT	LIT-18616-01-20		
1995	6MLHT	LIT-18616-01-21		
1995	6MSHT	LIT-18616-01-21		
1995	70TLRT	LIT-18616-01-25		
1995	8MLHT	LIT-18616-01-21		
1995	8MSHT	LIT-18616-01-21		
1995	9.9ELHT	LIT-18616-00-99		
1995	9.9ESHT	LIT-18616-00-99		
1995	9.9MLHT	LIT-18616-00-99		
1995	9.9MSHT	LIT-18616-00-99		
1995	90EJRT	LIT-18616-01-25	LIT-18619-00-97	
1995	90TLRT	LIT-18616-01-25		
1995	C115TLRT	LIT-18616-00-56		
1995	C115TXRT	LIT-18616-00-56		
1995	C25ELHT	LIT-18616-00-55		
1995	C25ELRT	LIT-18616-00-55		
1995	C25MLHT	LIT-18616-00-55		
1995	C25MSHT	LIT-18616-00-55		
1995	C30ELRT	LIT-18616-00-95		
1995	C40ELRT	LIT-18616-00-45		
1995	C40MLHT	LIT-18616-00-45		
1995	C40MSHT	LIT-18616-00-45		
1995	C40PLRT	LIT-18616-00-45		
1995	C55ELRT	LIT-18616-00-43		
1995	C55TLRT	LIT-18616-00-43		
1995	C75TLRT	LIT-18616-00-44	LIT-18616-00-84	
1995	C85TLRT	LIT-18616-00-44		
1995	E48MLHT	LIT-18616-01-28		
1995	E60MLHT	LIT-18616-01-29		
1995	E75MLHT	LIT-18616-01-30		
1995	F9.9MLHT	LIT-18616-01-24		
1995	F9.9MSHT	LIT-18616-01-24		
1995	L130TXRT	LIT-18616-01-13		
1995	L150TXRT	LIT-18616-01-13		
1995	L200TLRT	LIT-18616-01-13		
1995	L200TXRT	LIT-18616-01-13		
1995	L225TURT	LIT-18616-01-14		
1995	L225TXRT	LIT-18616-01-14		
1995	L250TURT	LIT-18616-01-14		
1995	L250TXRT	LIT-18616-01-14		
1995	P115TLRT	LIT-18616-01-13		
1995	P150TLRT	LIT-18616-01-13		
1995	P175TLRT	LIT-18616-01-13		
1995	P200LTRT	LIT-18616-01-13		
1995	P50TLRT	LIT-18616-01-19		
1995	P60TLHT	LIT-18616-01-25		
1995	T9.9ELHT	LIT-18616-01-24		
1995	T9.9ELRT	LIT-18616-01-24		
1995	T9.9EXHT	LIT-18616-01-24		
1995	T9.9MXHT	LIT-18616-01-24		

Year	Model	Service Manual	Supplement	Supplement 2
1996	115TJRU	LIT-18616-01-40	LIT-18619-00-97	
1996	115TLRU	LIT-18616-01-40		
1996	130TLRU	LIT-18616-01-40		
1996	150TJRU	LIT-18616-01-41	LIT-18619-00-97	
1996	150TLRU	LIT-18616-01-41		
1996	15ELHU	LIT-18616-01-22		
1996	15ESHU	LIT-18616-01-22		
1996	15MLHU	LIT-18616-01-22		
1996	15MSHU	LIT-18616-01-22		
1996	200TLRU	LIT-18616-01-41		
1996	200TXRU	LIT-18616-01-41		
1996	20MLHU	LIT-18616-01-36		
1996	20MSHU	LIT-18616-01-36		
1996	225TLRU	LIT-18616-01-41		
1996	25ELHU	LIT-18616-01-66		
1996	25ELRU	LIT-18616-01-66		
1996	25ESHU	LIT-18616-01-66		
1996	25MLHU	LIT-18616-01-66		
1996	25MSHU	LIT-18616-01-66		
1996	2MSHU	LIT-18616-01-31		
1996	30ELHU	LIT-18616-01-37		
1996	30ELRU	LIT-18616-01-37		
1996	30ESRU	LIT-18616-01-37		
1996	30MLHU	LIT-18616-01-37		
1996	30MSHU	LIT-18616-01-37		
1996	3MLHU	LIT-18616-01-32		
1996	3MSHU	LIT-18616-01-32		
1996	40EJRU	LIT-18616-01-38	LIT-18619-00-97	
1996	40ELRU	LIT-18616-01-38		
1996	40ESRU	LIT-18616-01-38		
1996	40MJHU	LIT-18616-01-38	LIT-18619-00-97	
1996	40MLHU	LIT-18616-01-38		
1996	40MSHU	LIT-18616-01-38		
1996	40TLHU	LIT-18616-01-38		
1996	40TLRU	LIT-18616-01-38		
1996	4MLHU	LIT-18616-01-33		
1996	4MSHU	LIT-18616-01-33		
1996	50EJRU	LIT-18616-01-38	LIT-18619-00-97	
1996	50TLHU	LIT-18616-01-38		
1996	5MLHU	LIT-18616-01-33		
1996	5MSHU	LIT-18616-01-33		
1996	6MLHU	LIT-18616-01-34		
1996	6MSHU	LIT-18616-01-34		
1996	70TLRU	LIT-18616-01-39		
1996	8MLHU	LIT-18616-01-34		
1996	8MSHU	LIT-18616-01-34		
1996	9.9ELHU	LIT-18616-01-22		
1996	9.9ELRU	LIT-18616-01-22		
1996	9.9ESHU	LIT-18616-01-22		
1996	9.9MLHU	LIT-18616-01-22		
1996	9.9MSHU	LIT-18616-01-22		
1996	90TJRU	LIT-18616-01-39	LIT-18619-00-97	
1996	90TLRU	LIT-18616-01-39		
1996	C115TLRU	LIT-18616-00-56		
1996	C115TXRU	LIT-18616-00-56		
1996	C150TLRU	LIT-18616-01-41		
1996	C150TXRU	LIT-18616-01-41		
1996	C25ELHU	LIT-18616-00-55		
1996	C25ELRU	LIT-18616-00-55		
1996	C25MLHU	LIT-18616-00-55		
1996	C25MSHU	LIT-18616-00-55		
1996	C30ELRU	LIT-18616-01-51		
1996	C40ELRU	LIT-18616-01-50		
1996	C40MSHU	LIT-18616-01-50		
1996	C40PLRU	LIT-18616-01-50		
1996	C60TLRU	LIT-18616-01-39		
1996	C75TLRU	LIT-18616-01-49		
1996	C85TLRU	LIT-18616-01-49		
1996	E60MLHU	LIT-18616-01-29		
1996	E75MLHU	LIT-18616-01-49		
1996	F50TLHU	LIT-18616-FT-50		
1996	F50TLRU	LIT-18616-FT-50		
1996	L130TXRU	LIT-18616-01-40		
1996	L150TXRU	LIT-18616-01-41		
1996	L200TXRU	LIT-18616-01-41		
1996	L225TURU	LIT-18616-01-42		
1996	L225TXRU	LIT-18616-01-42		
1996	L250TURU	LIT-18616-01-42		
1996	L250TXRU	LIT-18616-01-42		
1996	P115TLRU	LIT-18616-01-40		
1996	P150TLRU	LIT-18616-01-41		
1996	P175TLRU	LIT-18616-01-41		
1996	P200TLRU	LIT-18616-01-41		
1996	P50TLRU	LIT-18616-01-38		
1996	P60TLHU	LIT-18616-01-39		
1996	P75TLHU	LIT-18616-01-39		
1996	S115TLRU	LIT-18616-01-40		
1996	S115TXRU	LIT-18616-01-40		
1996	S130TLRU	LIT-18616-01-40		
1996	S130TXRU	LIT-18616-01-40		
1996	S150TLRU	LIT-18616-01-41		
1996	S150TXRU	LIT-18616-01-41		
1996	S175TXRU	LIT-18616-01-41		
1996	S200TXRU	LIT-18616-01-41		
1996	S225TURU	LIT-18616-01-41		
1996	S225TXRU	LIT-18616-01-41		
1996	S250TURU	LIT-18616-01-41		
1996	S250TXRU	LIT-18616-01-41		
1996	T50TLRU	LIT-18616-FT-50		
1996	T9.9ELHU	LIT-18616-01-35		
1996	T9.9ELRU	LIT-18616-01-35		
1996	T9.9EXHU	LIT-18616-01-35		
1996	T9.9MLHU	LIT-18616-01-35		
1996	T9.9MXHU	LIT-18616-01-35		

YEAR	MODEL	SERVICE MANUAL	SUPPLEMENT	SUPPLEMENT 2
1997	115TJRV	LIT-18616-01-70	LIT-18619-00-97	
1997	115TLRV	LIT-18616-01-70		
1997	130TLRV	LIT-18616-01-70		
1997	150TJRV	LIT-18616-01-71	LIT-18619-00-97	
1997	150TLRV	LIT-18616-01-71		
1997	15ELHV	LIT-18616-01-65		
1997	15ESHV	LIT-18616-01-65		
1997	15MLHV	LIT-18616-01-65		
1997	15MSHV	LIT-18616-01-65		
1997	175TLRV	LIT-18616-01-71		
1997	200TLRV	LIT-18616-01-71		
1997	20MLHV	LIT-18616-01-66		
1997	20MSHV	LIT-18616-01-66		
1997	225TLRV	LIT-18616-01-61		
1997	25ELHV	LIT-18616-01-66		
1997	25ELRV	LIT-18616-01-66		
1997	25ESHV	LIT-18616-01-66		
1997	25MLHV3	LIT-18616-01-68		
1997	25MSHV3	LIT-18616-01-68		
1997	2MSHV	LIT-18616-01-31		
1997	30ELHV	LIT-18616-01-68		
1997	30ELRV	LIT-18616-01-68		
1997	30ESRV	LIT-18616-01-68		
1997	30MLHV	LIT-18616-01-68		
1997	30MSHV	LIT-18616-01-68		
1997	3MLHV	LIT-18616-01-63		
1997	3MSHV	LIT-18616-01-63		
1997	40EJRV	LIT-18616-01-38	LIT-18619-00-97	
1997	40ELRV	LIT-18616-01-38		
1997	40ESRV	LIT-18616-01-38		
1997	40MJHV	LIT-18616-01-38	LIT-18619-00-97	
1997	40MLHV	LIT-18616-01-38		
1997	40MSHV	LIT-18616-01-38		
1997	40TLHV	LIT-18616-01-38		
1997	40TLRV	LIT-18616-01-38		
1997	4MLHV	LIT-18616-01-33		
1997	4MSHV	LIT-18616-01-33		
1997	50EJRV	LIT-18616-01-38	LIT-18619-00-97	
1997	50TLHV	LIT-18616-01-38		
1997	50TLRV	LIT-18616-01-38		
1997	5MLHV	LIT-18616-01-33		
1997	5MSHV	LIT-18616-01-33		
1997	6MLHV	LIT-18616-01-64		
1997	6MSHV	LIT-18616-01-64		
1997	70TLRV	LIT-18616-01-69		
1997	8MLHV	LIT-18616-01-64		
1997	8MSHV	LIT-18616-01-64		
1997	9.9ELRV	LIT-18616-01-65		
1997	9.9ESHV	LIT-18616-01-65		
1997	9.9MLHV	LIT-18616-01-65		
1997	9.9MSHV	LIT-18616-01-65		
1997	90TJRV	LIT-18616-01-69	LIT-18619-00-97	
1997	90TLRV	LIT-18616-01-69		
1997	C115TLRV	LIT-18616-01-70		
1997	C115TXRV	LIT-18616-01-70		
1997	C150TLRV	LIT-18616-01-71		
1997	C150TXRV	LIT-18616-01-71		
1997	C25ELHV	LIT-18616-01-67		
1997	C25ELRV	LIT-18616-01-67		
1997	C25MLHV	LIT-18616-01-67		
1997	C25MSHV	LIT-18616-01-67		
1997	C30ELRV	LIT-18616-01-67		
1997	C40ELRV	LIT-18616-01-50		
1997	C40ESHV	LIT-18616-01-50		
1997	C40MSHV	LIT-18616-01-50		
1997	C40PLRV	LIT-18616-01-50		
1997	C40TLRV	LIT-18616-01-50		
1997	C60TLRV	LIT-18616-01-69		
1997	C80TLRV	LIT-18616-01-69		
1997	C90TLRV	LIT-18616-01-69		
1997	D150TLRV	LIT-18616-01-71		
1997	E48MLHV	LIT-18616-01-28		
1997	E60MLHV	LIT-18616-01-29		
1997	E75MLHV	LIT-18616-01-73		
1997	F50TLHV	LIT-18616-FT-50		
1997	F50TLRV	LIT-18616-FT-50		
1997	F9.9MLHV	LIT-18616-01-35		
1997	F9.9MSHV	LIT-18616-01-35		
1997	L130TXRV	LIT-18616-01-70		
1997	L150TXRV	LIT-18616-01-71		
1997	L200TXRV	LIT-18616-01-71		
1997	L225TURV	LIT-18616-01-61		
1997	L225TXRV	LIT-18616-01-61		
1997	L250TURV	LIT-18616-01-61		
1997	L250TXRV	LIT-18616-01-61		
1997	P150TLRV	LIT-18616-01-71		
1997	P175TLRV	LIT-18616-01-71		
1997	P200TLRV	LIT-18616-01-71		
1997	P60TLHV	LIT-18616-01-69		
1997	P75TLHV	LIT-18616-01-69		
1997	S115TLRV	LIT-18616-01-70		
1997	S115TXRV	LIT-18616-01-70		
1997	S130TLRV	LIT-18616-01-70		
1997	S130TXRV	LIT-18616-01-70		
1997	S150TLRV	LIT-18616-01-71		
1997	S150TXRV	LIT-18616-01-71		
1997	S175TXRV	LIT-18616-01-71		
1997	S200TXRV	LIT-18616-01-71		
1997	S225TURV	LIT-18616-01-61		
1997	S225TXRV	LIT-18616-01-61		
1997	S250TURV	LIT-18616-01-61		
1997	S250TXRV	LIT-18616-01-61		
1997	T50TLRV	LIT-18616-FT-50		
1997	T9.9ELHV	LIT-18616-01-35		
1997	T9.9ELRV	LIT-18616-01-35		
1997	T9.9EXHV	LIT-18616-01-35		
1997	T9.9EXRV	LIT-18616-01-35		
1997	T9.9MLHV	LIT-18616-01-35		
1997	T9.9MXHV	LIT-18616-01-35		

Year	Model	Service Manual	Supplement	Supplement 2
1998	115TJRW	LIT-18616-01-92	LIT-18619-00-97	
1998	115TLRW	LIT-18616-01-92		
1998	130TLRW	LIT-18616-01-92		
1998	150TJRW	LIT-18616-01-87	LIT-18619-00-97	
1998	150TLRW	LIT-18616-01-87		
1998	15MLHW	LIT-18616-01-65		
1998	15MSHW	LIT-18616-01-65		
1998	175TLRW	LIT-18616-01-87		
1998	200TLRW	LIT-18616-01-87		
1998	25ELHW	LIT-18616-01-66		
1998	25ELRW	LIT-18616-01-66		
1998	25ESHW	LIT-18616-01-66		
1998	25MLHW	LIT-18616-01-66		
1998	25MLHW3	LIT-18616-01-94		
1998	25MSHW	LIT-18616-01-66		
1998	25MSHW3	LIT-18616-01-94		
1998	2MSHW	LIT-18616-01-31		
1998	30ELHW	LIT-18616-01-94		
1998	30ELRW	LIT-18616-01-94		
1998	30ESRW	LIT-18616-01-94		
1998	30MLHW	LIT-18616-01-94		
1998	30MSHW	LIT-18616-01-94		
1998	3MLHW	LIT-18616-01-63		
1998	3MSHW	LIT-18616-01-63		
1998	40ELRW	LIT-18616-01-81		
1998	40ESRW	LIT-18616-01-81		
1998	40MLHW	LIT-18616-01-81		
1998	40MSHW	LIT-18616-01-81		
1998	40TLRW	LIT-18616-01-81		
1998	4MLHW	LIT-18616-01-33		
1998	4MSHW	LIT-18616-01-33		
1998	5MLHW	LIT-18616-01-33		
1998	5MSHW	LIT-18616-01-33		
1998	6MLHW	LIT-18616-01-64		
1998	6MSHW	LIT-18616-01-64		
1998	70TLRW	LIT-18616-01-82		
1998	8MLHW	LIT-18616-01-64		
1998	8MSHW	LIT-18616-01-64		
1998	9.9MLHW	LIT-18616-01-65		
1998	9.9MSHW	LIT-18616-01-65		
1998	90TJRW	LIT-18616-01-82	LIT-18619-00-97	
1998	90TLRW	LIT-18616-01-82		
1998	B115TLRW	LIT-18616-01-92		
1998	B90TLRW	LIT-18616-01-82		
1998	C115TLRW	LIT-18616-01-92		
1998	C115TXRW	LIT-18616-01-92		
1998	C150TLRW	LIT-18616-01-87		
1998	C150TXRW	LIT-18616-01-87		
1998	C40TLRW	LIT-18616-01-81		
1998	C50TLRW	LIT-18616-01-81		
1998	C60TLRW	LIT-18616-01-82		
1998	C75TLRW	LIT-18616-01-82		
1998	C90TLRW	LIT-18616-01-82		
1998	D150TLRW	LIT-18616-01-87		
1998	E48MLHW	LIT-18616-01-28		
1998	E60MLHW	LIT-18616-01-29		
1998	E75MLHW	LIT-18616-01-73		
1998	F15ELHW	LIT-18616-01-78		
1998	F15ESHW	LIT-18616-01-78		
1998	F15MLHW	LIT-18616-01-78		
1998	F15MSHW	LIT-18616-01-78		
1998	F25ELHW	LIT-18616-01-77		
1998	F25ELRW	LIT-18616-01-77		
1998	F25ESHW	LIT-18616-01-77		
1998	F25TLRW	LIT-18616-01-77		
1998	F50TLHW	LIT-18616-01-84		
1998	F50TLRW	LIT-18616-01-84		
1998	F9.9MLHW	LIT-18616-01-83		
1998	F9.9MSHW	LIT-18616-01-83		
1998	L130TXRW	LIT-18616-01-92		
1998	L150TXRW	LIT-18616-01-87		
1998	L200TXRW	LIT-18616-01-87		
1998	L225TURW	LIT-18616-01-85		
1998	L225TXRW	LIT-18616-01-85		
1998	L250TURW	LIT-18616-01-85		
1998	L250TXRW	LIT-18616-01-85		
1998	P150TLRW	LIT-18616-01-87		
1998	P175TLRW	LIT-18616-01-87		
1998	P200TLRW	LIT-18616-01-87		
1998	P40EJRW	LIT-18616-01-81	LIT-18619-00-97	
1998	P40TLHW	LIT-18616-01-81		
1998	P60TLHW	LIT-18616-01-82		
1998	P75TLHW	LIT-18616-01-82		
1998	S115TLRW	LIT-18616-01-92		
1998	S115TXRW	LIT-18616-01-92		
1998	S130TLRW	LIT-18616-01-92		
1998	S130TXRW	LIT-18616-01-92		
1998	S150TLRW	LIT-18616-01-87		
1998	S150TXRW	LIT-18616-01-87		
1998	S175TXRW	LIT-18616-01-87		
1998	S200TXRW	LIT-18616-01-87		
1998	S225TURW	LIT-18616-01-85		
1998	S225TXRW	LIT-18616-01-85		
1998	S250TXRW	LIT-18616-01-85		
1998	T50TLRW	LIT-18616-01-84		
1998	V200TLRW	LIT-18616-01-85		
1998	V225TLRW	LIT-18616-01-85		

Year	Model	Service Manual	Supplement	Supplement 2
1999	115TJRX	LIT-18616-02-03	LIT-18619-00-97	
1999	130TLRX	LIT-18616-02-03		
1999	150TJRX	LIT-18616-02-01	LIT-18619-00-97	
1999	15MLHX	LIT-18616-01-65		
1999	15MSHX	LIT-18616-01-65		
1999	25MLHX3	LIT-18616-01-94		
1999	25MSHX3	LIT-18616-01-94		
1999	2MSHX	LIT-18616-01-31		
1999	30EHX	LIT-18616-01-94		
1999	30ELHX	LIT-18616-01-94		
1999	30ELRX	LIT-18616-01-94		
1999	30ERX	LIT-18616-01-94		
1999	30MHX	LIT-18616-01-94		
1999	30MLHX	LIT-18616-01-94		
1999	30MSHX	LIT-18616-01-94		
1999	3MLHX	LIT-18616-01-63		
1999	3MSHX	LIT-18616-01-63		
1999	40EJRX	LIT-18616-01-81	LIT-18619-00-97	
1999	40ESRX	LIT-18616-01-81		
1999	40MJHX	LIT-18616-01-81	LIT-18619-00-97	
1999	40MLHX	LIT-18616-01-81		
1999	40MSHX	LIT-18616-01-81		
1999	40TLRX	LIT-18616-01-81		
1999	4MLHX	LIT-18616-01-33		
1999	4MSHX	LIT-18616-01-33		
1999	50EJRX	LIT-18616-01-81	LIT-18619-00-97	
1999	5MLHX	LIT-18616-01-33		
1999	5MSHX	LIT-18616-01-33		
1999	6MLHX	LIT-18616-01-64		
1999	6MSHX	LIT-18616-01-64		
1999	70TRX	LIT-18616-02-05		
1999	8MLHX	LIT-18616-01-64		
1999	8MSHX	LIT-18616-01-64		
1999	9.9MLHX	LIT-18616-01-65		
1999	9.9MSHX	LIT-18616-01-65		
1999	90TJRX	LIT-18616-02-05	LIT-18619-00-97	
1999	90TLRX	LIT-18616-02-05		
1999	B115TLRX	LIT-18616-02-03		
1999	B90TLRX	LIT-18616-02-05		
1999	C115TLRX	LIT-18616-02-03		
1999	C115TXRX	LIT-18616-02-03		
1999	C150TLRX	LIT-18616-02-01		
1999	C150TXRX	LIT-18616-02-01		
1999	C40TLRX	LIT-18616-01-81		
1999	C50TLRX	LIT-18616-01-81		
1999	C60TLRX	LIT-18616-02-05		
1999	C75TLRX	LIT-18616-02-05		
1999	C90TLRX	LIT-18616-02-05		
1999	D150TLRX	LIT-18616-02-01		
1999	DX150TLRX	LIT-18616-01-99		
1999	E48MLHX	LIT-18616-01-28		
1999	E60MLHX	LIT-18616-01-29		
1999	E75MLHX	LIT-18616-01-73		
1999	F100TLRX	LIT-18616-01-96		
1999	F100TXRX	LIT-18616-01-96		
1999	F15ELHX	LIT-18616-01-78		
1999	F15ESHX	LIT-18616-01-78		
1999	F15MLHX	LIT-18616-01-78		
1999	F15MSHX	LIT-18616-01-78		
1999	F25ELHX	LIT-18616-01-95		
1999	F25ELRX	LIT-18616-01-95		
1999	F25ESHX	LIT-18616-01-95		
1999	F25MLHX	LIT-18616-01-95		
1999	F25MSHX	LIT-18616-01-95		
1999	F25TLRX	LIT-18616-01-95		
1999	F40TLRX	LIT-18616-01-97		
1999	F4MLHX	LIT-18616-01-79		
1999	F4MSHX	LIT-18616-01-79		
1999	F50TLRX	LIT-18616-01-97		
1999	F80TLRX	LIT-18616-01-96		
1999	F80TXRX	LIT-18616-01-96		
1999	F9.9ELRX	LIT-18616-01-83		
1999	F9.9MLHX	LIT-18616-01-83		
1999	F9.9MSHX	LIT-18616-01-83		
1999	L130TXRX	LIT-18616-02-03		
1999	L150TXRX	LIT-18616-02-01		
1999	L200TXRX	LIT-18616-02-01		
1999	L225TXRX	LIT-18616-02-02		
1999	L250TURX	LIT-18616-02-02		
1999	L250TXRX	LIT-18616-02-02		
1999	LX150TXRX	LIT-18616-01-99		
1999	LX200TXRX	LIT-18616-01-99		
1999	P150TLRX	LIT-18616-02-01		
1999	P175TLRX	LIT-18616-02-01		
1999	P200TLRX	LIT-18616-02-01		
1999	P60TLHX	LIT-18616-02-05		
1999	P75TLHX	LIT-18616-02-05		
1999	PX150TLRX	LIT-18616-01-99		
1999	S115TLRX	LIT-18616-02-03		
1999	S115TXRX	LIT-18616-02-03		
1999	S130TLRX	LIT-18616-02-03		
1999	S130TXRX	LIT-18616-02-03		
1999	S150TLRX	LIT-18616-02-01		
1999	S150TXRX	LIT-18616-02-01		
1999	S175TXRX	LIT-18616-02-01		
1999	S200TXRX	LIT-18616-02-01		
1999	S225TURX	LIT-18616-02-02		
1999	S225TXRX	LIT-18616-02-02		
1999	S250TURX	LIT-18616-02-02		
1999	S250TXRX	LIT-18616-02-02		
1999	SX150TLRX	LIT-18616-01-99		
1999	SX150TXRX	LIT-18616-01-99		
1999	SX200TXRX	LIT-18616-01-99		
1999	T50TLRX	LIT-18616-01-97		
1999	T9.9ELHX	LIT-18616-01-83		
1999	T9.9ELRX	LIT-18616-01-83		
1999	T9.9EXHX	LIT-18616-01-83		
1999	T9.9EXRX	LIT-18616-01-83		
1999	V200TLRX	LIT-18616-02-02		
1999	V225TLRX	LIT-18616-02-02		